


**NOTES:**

1. EDGE SIDEWALK WITH 3/8" RADIUS EDGING TOOL. ROUND EDGES AT EXPANSION JOINTS TO A RADIUS OF 3/8".
2. USE FINE HAIR BROOM TO FINISH WALKS ON GRADES UNDER 6%, OVER 6% USE ROUGH HAIR BROOM.
3. USE 4" THICK, GRADE 1 UNTREATED BASE COURSE COMPACTED TO A MINIMUM OF 95% PER SPECIFICATIONS.
4. LOCATE THE INLET GRATE 2' MINIMUM AWAY FROM THE PEDESTRIAN CROSSWALK WITH ALL DRAINAGE INTERCEPTED BEFORE IT GETS TO THE CROSSWALK AREA.
5. USE EXPANSION JOINT FILLER MADE OF PREMOLDED BITUMINOUS OR SIMILAR MATERIAL AND PLACED AT THE INTERSECTIONS WITH OTHER SIDEWALKS AND WHERE SIDEWALK MEETS THE CURB. USE TYPE F1 PER SECTION 3060.

TYPICAL AT INTERSECTION CORNERS

RAMP SLOPES

- ①+ 3/4" SLOPE PER FOOT
- ②+ 1/4" SLOPE PER FOOT

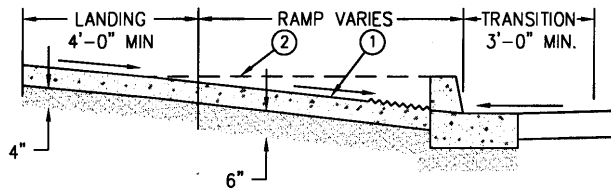

SECTION A-A

**OGDEN CITY  
ENGINEERING**

6/10/04

**Sidewalk Ramp**

STANDARD PLANS

**SW-2**

SHEET 1 OF 1

REPLACES # 235